

Product Information

SECU Special Seals for Tanker-Trucks



Special Seals for Tanker-Trucks to protect against Manipulation



The **SECU Tube Seal** is used to seal the compressed air pipe connections.

The pipe connection (e.g. at the bottom valve) is surrounded with the plastic part and locked with a pin. The seal can only be opened by destroying it.

If you want to recognize when someone removes a seal and replaces it with another, you can also add a numbered **SECU Mechanical Seal** (recommended).



The **SECU Retain Seal** is used to seal the SECUs wet-leg (retain) sensors.

The cable of the sensor is pulled through the large sleeve until the sleeve is up against the API. Then attach the supplied washer to fix the cover with the two cable ties.

This is followed by the end-cap, which is fixed with a numbered **SECU Mechanical Seal**.



The **SECU IntelliCom Housing** is used to protect the router/modem SECUs IntelliCom, which is used for location and data transmission to the SECUs Client data management.

All connections and the SIM Card are protected from unauthorized access. The box is sealed with a numbered **SECU Mechanical Seal**.

Product Information

SECU Special Seals for Tanker-Trucks



The **SECU Mechanical Seal** is a numbered seal that is recorded in a “number management file”.

It is recommended to use this seal for all SECU MultiTank parts and **in combination with the SECU Tube Seal, SECU Retain Seal or SECU IntelliCom Housing.**

Of course, the **SECU Mechanical Seal** can also be used for non SECU-TECH applications.